

Island Pad Sea Anchor Installation Guide & User Instructions



Required Installation Materials



- 1: 120ml of flexible PVC glue: Island Products PVC glue or LePage Flexible plastic adhesive designed for PVC - Available at major hardware stores
- 2: Green Painters Tape
- 3: Small disposable paint brush or small wooden stick - to spread glue
- 4: Measuring tape
- 5: Pure Rubbing Alcohol or Acetone (found in hardware store)
- 6: Newspaper & Paper Towel
- 7: Gloves

Sea Anchor Installation

**** Please Read Instructions Fully Before Installation ****

**** Always Work in a Well-Ventilated Area and Avoid Inhaling Fumes ****


If you run into problems or need help troubleshooting installation of Sea Anchors, please call Taylor at 705-331-2591 for support.

Step 1:

Unroll Island Pad with the top side facing down. Your Sea Anchors will be attached to the bottom of your Island Pad. Ensure the Island Pad is fully deflated and the area where the Sea Anchors are to be attached is free of wrinkles, dirt and debris.

Step 2:

Refer to Page 6 to see measurements for correct placement of Sea Anchor Pads. Measure the locations of the Sea Anchor Pads and place green painter's tape to mark the location of pad placement as seen in the image below: *(Sea Anchor Pad colours and size may vary)*

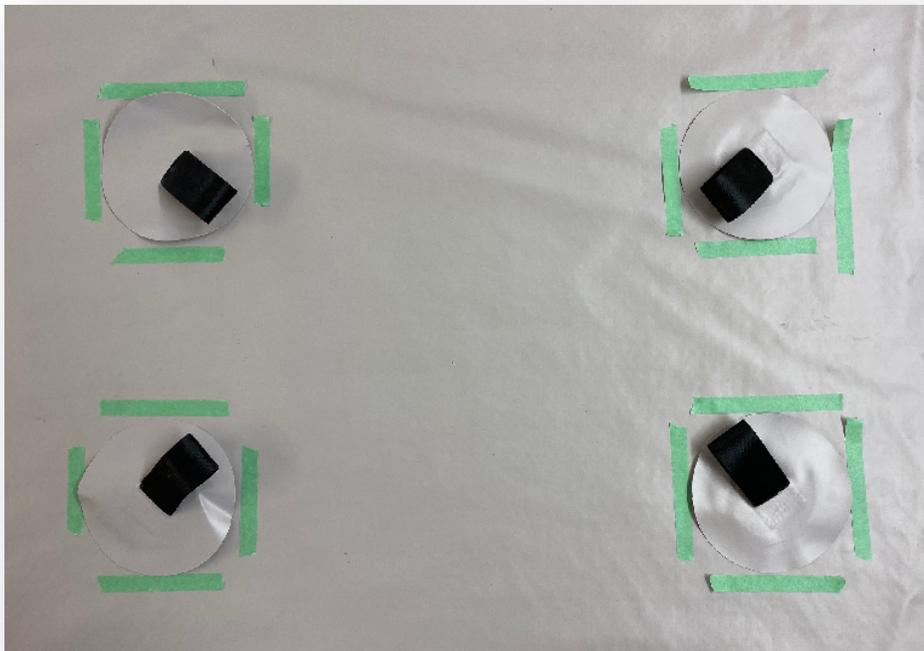


Step 3:

Clean all surfaces with Rubbing Alcohol or Acetone to prepare the surface for gluing. Spread out newspaper or paper towels around the work area to keep excess glue off of your Island Pad.

Step 4:


Apply glue evenly to back of the first Sea Anchor Pad in a continuous motion. Use approximately 15-30ml of glue per pad as seen in the image below:

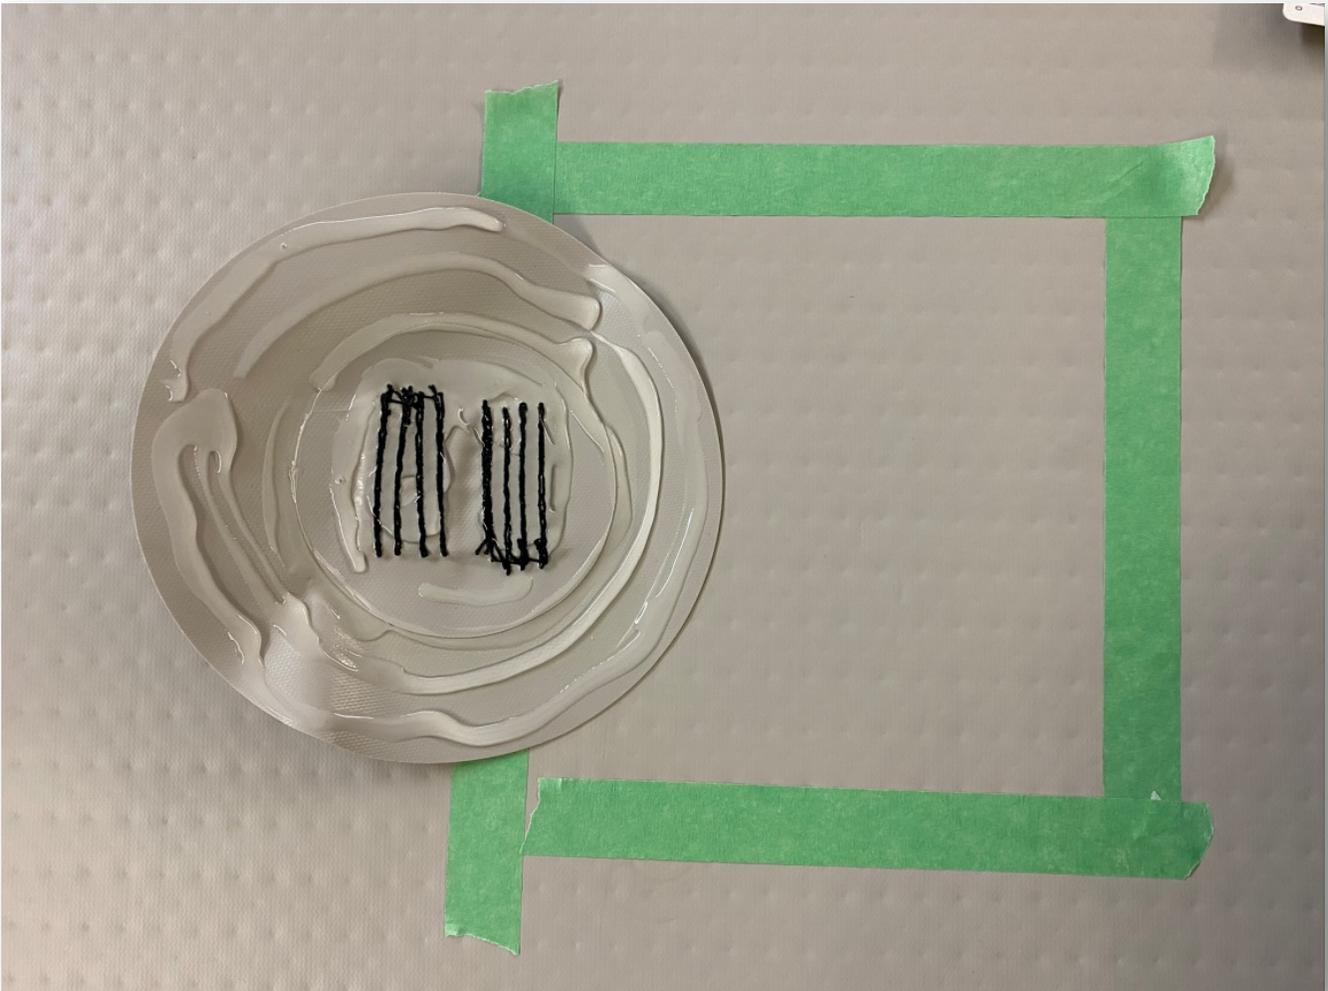

Step 5:

With the paint brush or wooden stick, spread glue applied in *Step 4* evenly around the entire surface of the Sea Anchor Pad as seen in the image below.


Next, place the Sea Anchor Pad between the green painter's tape. Press the Sea Anchor Pad onto the Island Pad to transfer glue, then immediately remove the Sea Anchor Pad and allow the glue to tack up for 2-4 minutes before final application. (*Allowing the glue to tack up will help with the pad adhesion and is essential for proper installation.*)

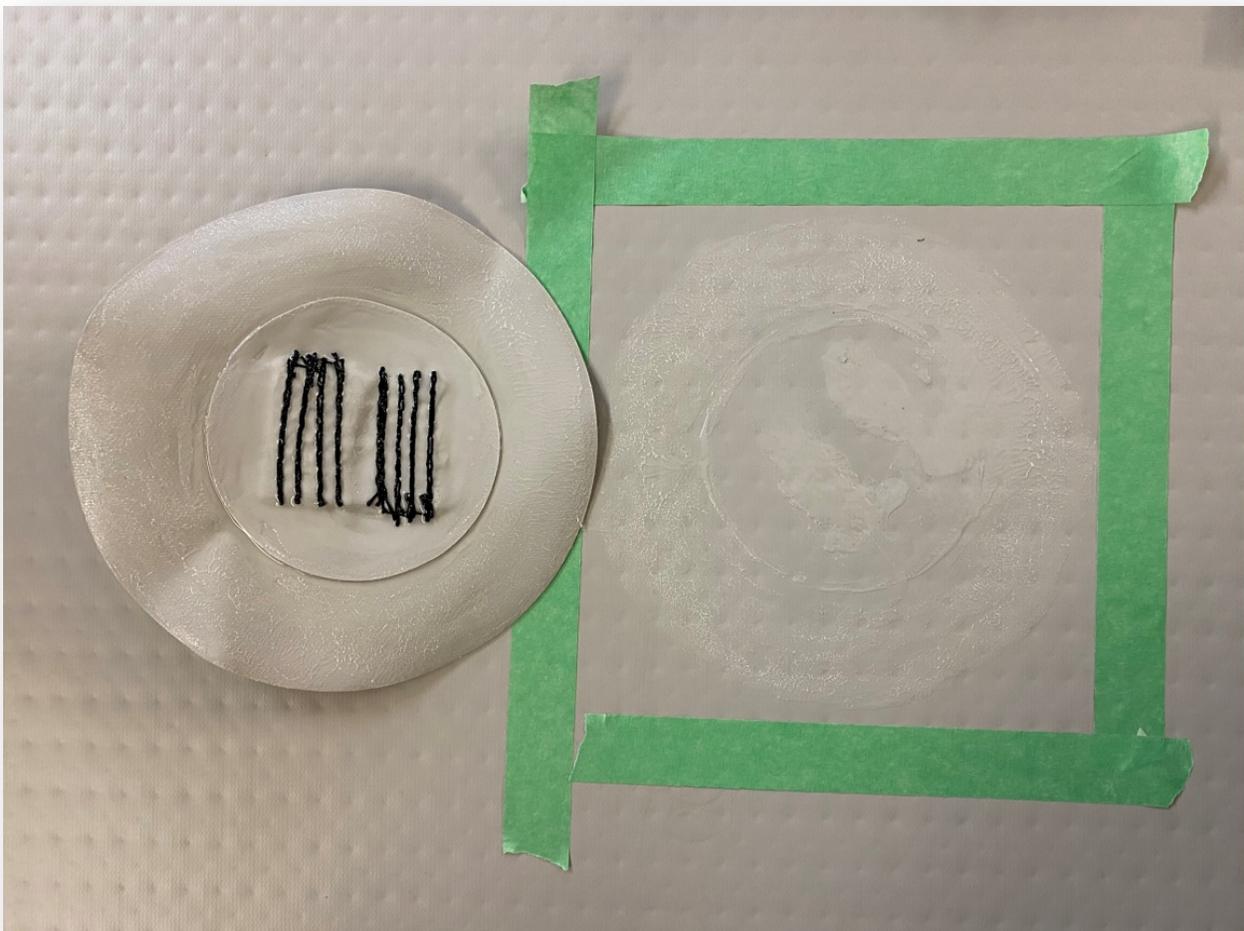

Step 6:

After waiting 2-4 minutes for the glue to tack up in Step 5, apply the Sea Anchor Pad as seen below for the final time. Push firmly from the middle out, eliminating any air bubbles trapped behind the edges of the Sea Anchor Pad (*Note that air bubbles behind the webbing in the middle of the Sea Anchor pad are expected and normal*).

Wipe excess glue from edges with paper towel or a gloved finger. Spilled glue can be cleaned with a minimal amount of Acetone.

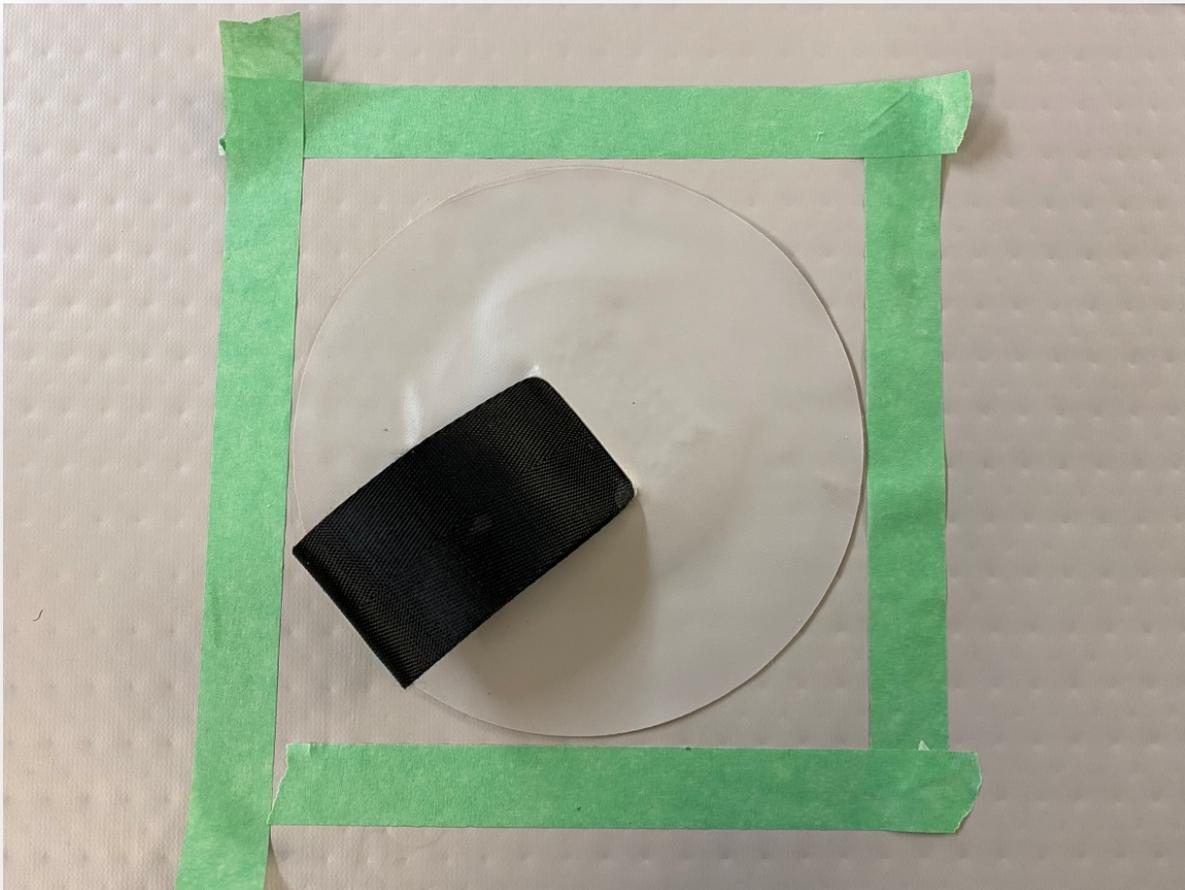

Repeat Steps 4 through 6 for remaining Sea Anchor Pads.

To ensure proper adhesion and full strength, we recommend not using your Island Pad for at least 72 hours after installation of Sea Anchor Pads.

Step 7:

After waiting 72 hours for the glue to cure, install Sea Anchors onto Sea Anchor Pads as seen below and ensure Velcro straps are *tight* to eliminate movement in the water:




USER INSTRUCTIONS: Once Sea Anchors are attached to the bottom of your Island Pad, they will fill with water and provide stability for activities. ATTENTION: NEVER tow your Island Pad with Sea Anchors attached as serious damage may occur! Always remove Sea Anchors from Island Pad after use and before storage.

Always work in a well-ventilated area and do not inhale fumes.


If you run into problems or need help troubleshooting installation of Sea Anchors, please call Taylor at 705-331-2591 for support.

Measurements for Correct Placement of Sea Anchor Pads

MODEL IP240

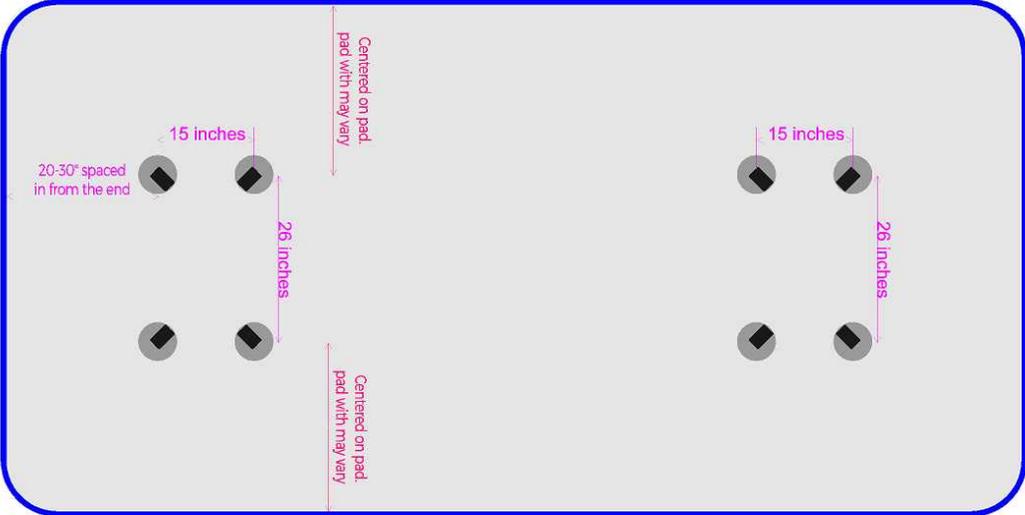

MODEL IP230

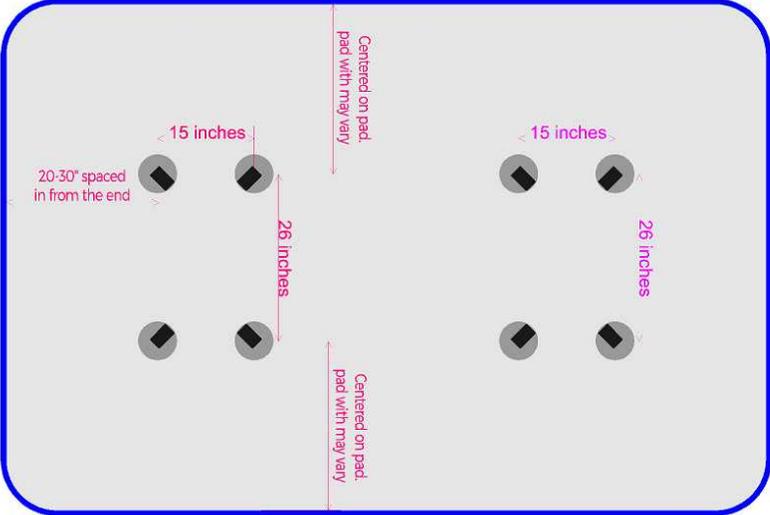

MODEL IP225

